

Pneumatic Stool (with or without back)



Congratulations on your purchase.

The following instructions will guide you through each step of assembly.

1. Verify all inventory parts as noted in the diagram.
2. Insert wheels into stool base. Seating them securely may take some force. Place stool base on the floor with wheels facing down.


3. REMOVE AND DISCARD PROTECTIVE PLASTIC CAP FROM PNEUMATIC CYLINDER

Note: If you did not order stool with foot ring, SKIP to step 6.

4. (Optional*) Remove adjustable foot ring knob. Pull up the sleeve in the foot ring hold and make sure the metal portion is facing the knob insert point.
5. (Optional*) Place the large metal end of the cylinder into the round opening in the foot ring.
6. Place cylinder (with foot ring attached, if using) into the round opening of the stool base.
7. (If using backrest) Remove and discard plastic attached to knob. Insert back rest bracket into the receiver on bottom of seat and tighten knob.
8. (Pneumatic Stool Only/If using backrest) Unscrew the knob from the rear of the back rest, insert long end of metal bracket into receiver on the back of the back rest, replace and tighten knob.

Insert seat onto the top of the pneumatic cylinder. Carefully sit down on the seat until the cylinder locks in place.

*Optional Foot Ring is available for standard height stools only

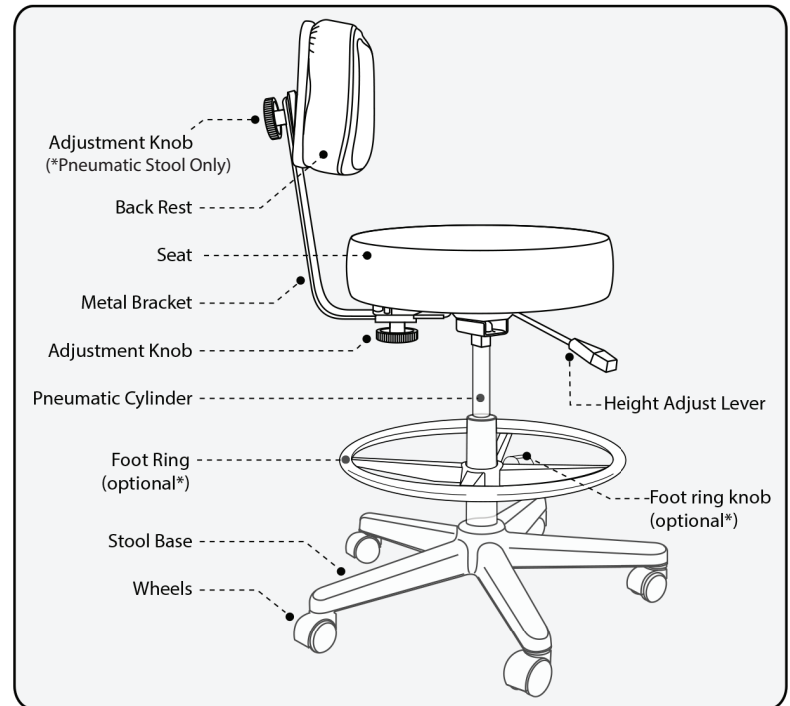

Pneumatic Stool (with or without back)



Congratulations on your purchase.

The following instructions will guide you through each step of assembly.

1. Verify all inventory parts as noted in the diagram.
2. Insert wheels into stool base. Seating them securely may take some force. Place stool base on the floor with wheels facing down.

3. REMOVE AND DISCARD PROTECTIVE PLASTIC CAP FROM PNEUMATIC CYLINDER

Note: If you did not order stool with foot ring, SKIP to step 6.

4. (Optional*) Remove adjustable foot ring knob. Pull up the sleeve in the foot ring hold and make sure the metal portion is facing the knob insert point.
5. (Optional*) Place the large metal end of the cylinder into the round opening in the foot ring.
6. Place cylinder (with foot ring attached, if using) into the round opening of the stool base.
7. (If using backrest) Remove and discard plastic attached to knob. Insert back rest bracket into the receiver on bottom of seat and tighten knob.
8. (Pneumatic Stool Only/If using backrest) Unscrew the knob from the rear of the back rest, insert long end of metal bracket into receiver on the back of the back rest, replace and tighten knob.

Insert seat onto the top of the pneumatic cylinder. Carefully sit down on the seat until the cylinder locks in place.

*Optional Foot Ring is available for standard height stools only

